

# NEW FOR 2010 MARK 4 DISPENSER

## Wunder-Bar® Post-Mix Bar Dispenser

Innovations for Ease of Service and More Reliability

Wunder-Bar®



← Replace stem seal O-ring from the top of the handle, not the bottom, even under pressure. Retainer plate is removed, then O-ring.




← NEW shut-off screw includes soft-tip for positive shut-off.



↑ Sanitary drip tray design catches any nozzle drip and provides sanitary air-gap from nozzle. Nozzle stays clean. New drip tray is NSF listed.



← All handle heels now include split heel design.

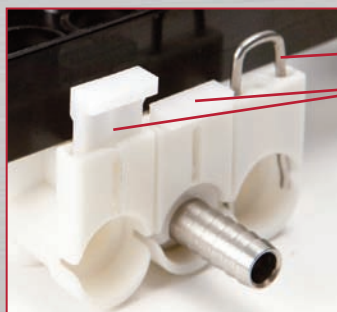

← NEW Kwik Klip stays put. Won't pull out.



**AUTOMATIC BAR CONTROLS, INC.**  
*Setting the Standards for over Thirty Five Years*

790 Eubanks Drive | Vacaville, California 95688 | 1-800-722-6738 | (707) 448-5151 | Fx: (707) 448-1521

Patents Pending

[www.wunderbar.com](http://www.wunderbar.com)